



OPERATING & MAINTENANCE INSTRUCTION MANUAL WITH SPARE PART LIST

(Guarantee Will be Void if not used as Instructed in this Manual)



WRH N WRH N-HL

2t - 2 Fall, 3t - 3 Fall

IRF ROPF HOIST

INDEF WRH N-N HL WIRE ROPE HOIST



INDEX

1.	Important Information & Warning	4
2.	Commissioning Check List	10
3.	Erection & Commissioning	11
4.	Safe Operating Procedures	13
5.	Recommended inspection and maintenance schedule	16
6.	Assembly & List of Spare parts	18
7.	User information Hoist & Trolley Brake	33
8.	Wiring Diagrams & List of Electrical Spares	39
9.	Maintenance & Handling	42



Important Information and Warnings

Terms and Summary

This manual provides important information for personnel involved with the installation, operation and maintenance of this product. Although you may be familiar with this or similar equipment, it is strongly recommended that you read this manual before installing, operating or maintaining the product.

Danger, Warning, Caution and Notice - Throughout this manual there are steps and procedures that can present hazardous situations. The following signal words are used to identify the degree or level of hazard seriousness.

DANGER:- Danger indicates an imminently hazardous situation which, if not avoided, will result in death or serious injury, and property damage

WARNING: Warning indicates an imminently hazardous situation which, if not avoided, could result in death or serious injury, and property damage.

CAUTION: Caution indicates a potentially hazardous situation which, if not avoided, may result minor or moderate injury or property damage.

NOTICE :- Notice is used to notify people of installation, operation, or maintenance information which is important but not directly hazard-related.

CAUTION

These general instructions deal with the normal installation, operation, and maintenance situations encountered with the equipment described herein. The instructions should not be interpreted to anticipate every possible contingency or to anticipate the final system, crane, or configuration that uses this equipment. For systems using the equipment covered by this manual, the supplier and owner of the system are responsible for the system's compliance with all applicable industry standards, and with all applicable federal, state and local regulations/codes.

This manual includes instructions and parts information for a variety of trolley and hoist types. Therefore, all instructions and parts information may not apply to any one type or size of specific trolley or hoist. Disregard those portions of the instructions that do not apply.

Record your hoist and trolley's Product Code and Serial Number on the front cover of this manual for identification and future reference to avoid referring to the wrong manual for information or instructions on installation, operation, inspection, maintenance, or parts.

Use only Indef authorized replacement parts in the service and maintenance of this trolley.



WARNING

Equipment described herein is not designed for and MUST NOT be used for lifting, supporting, oEquipment described herein is not designed for and MUST NOT be used for lifting, supporting, or transporting people, or for lifting or supporting loads over people.

Equipment described herein should not be used in conjunction with other equipment unless necessary and/or required safety devices applicable to the system, crane, or application are installed by the system designer, system manufacturer, crane manufacturer, installer, or user.

Modifications to upgrade, rerate, or otherwise alter this equipment shall be authorized only by the original equipment manufacturer.

Failure to read and comply with any one of the limitations noted herein can result in serious bodily injury or death, and/or property damage.

The angle between rope and plane perpendicular to the axis of the drum shall not exceed 5° (As per IS 3938 6.1.1.2).

Hoists shall not be operated unless the hoist unit is centered over the load, except when authorized by a qualified person who has determined that the components of the hoist and its mounting will not be overstressed. Should it be necessary to pick a load that is not centered under the hoist unit, precautions should be taken to control the swing of the load when it is picked clear of its support.

DANGER

HAZARDOUS VOLTAGES ARE PRESENT IN THE CONTROL BOX, OTHER ELECTRICAL COMPONENTS, AND CONNECTIONS BETWEEN THESE COMPONENTS.

Before performing ANY mechanical or electrical maintenance on the equipment, de-energize (disconnect) the main switch supplying power to the equipment; and lock and tag the main switch in the de-energized position.

Only trained and competent personnel should inspect and repair this equipment.



Information

This symbol indicates tips and useful information.



Warning Tag and Labels

The warning tag illustrated below in Figure is supplied with each hoist and trolley shipped from the factory. If the tag is not attached to the pendant cord for your hoist/trolley, order a tag from your dealer and fixit it. Read and obey all warnings attached to this Hoist/Trolley. Tag is not shown in actual size.

WARNING

IMPROPER use of powered Hoist could result in death Or serious injury.

To avoid these hazards:

- ► ALWAYS read owner's manual and safety instructions.
- ▶ Do NOT lift more than rated load.
- ▶ Do NOT lift or transport loads over or near people.
- ▶ Do NOT use a hoist for lifting supporting or transporting people.
- ▶ Do NOT operate unless load is centered under hoist.
- ▶ Do NOT support a load on the tip of the hook
- ▶ Do NOT use a hoist if the hook latch is missing or broken.
- ▶ Do NOT remove or obscure the warning lables.
- ▶ Do NOT run the load chain or wire rope over a sharp edge.
- ▶ Do NOT use the load chain or wire rope as a sling.
- ▶ Do NOT operate beyond the travel limits of the hook or load block.
- ▶ Do NOT use a twisted, kinked, damaged, or stretched load chain or wire rope.
- ▶ Do NOT operate a wire rope hoist with a wire rope that is not properly seated in its groove.



CONDITIONS WHERE WARRANTY WILL BE VOID / NOT APPLICABLE

HHL does not provide reimbursement for maintenance and visit charges for items such as: brake adjustments, lubrication oil changes, or any other item or activity deemed solely by HHL to be maintenance related.

HHL will not be liable for damage or malfunction and consequently warranty resulting from:

- a. Lack of maintenance.
- b. Use of improper or insufficient lubricants
- c. Supply voltage high/low or insufficient.
- d. Environmental conditions (including but not limited to extreme temperatures, humidity and corrosive environments).
- e. Outdoor applications where HHL is not intimated and recommendations for protection from the elements are not followed.
- f. Misuse or abuse (including but not limited to overloading, shock loading, or side / angular lifting / pulling).
- g. Use of parts other than genuine HHL replacement parts.
- h. Improper repairs or maintenance.
- i. Modifications not approved by HHL.
- i. Improper handling of product after it leaves HHL factory.
- k. Fire, accidents, or acts of God or nature, including but not limited to floods, hurricanes and lightning.
- l. Any piece of equipment not supplied by Hercules Hoists Limited, is installed on products.
- m. Malfunction or damage caused by items added to Hercules Hoists Limited products, including but not limited to controls and control components.
- n. Relocation of hoist / equipment without proper installation and commissioning by HHL / ABP.
- o. Misalignment in existing / installed Crane rail and hoist monorail, improper existing power feed track.



Operational cause Note

Overhead crane & hoists are typically designed to lift objects vertically. The specific guide lines are mentioned in respective IS standard .

Sometimes, however, operators attempt to make a side pull or cross pull or use the hoist horizontally to lift an object that is not directly underneath it.

This can cause damage to hoist.

Probable failures/Risks:

- ▶ Side pulling can cause damage to various hoist parts Load Chain Wheel, Chain Guide Roller, Chain Stripper, Hook and hook latch assembly, in electric Chain Hoists the load chain guide and chain stripper ad in Wire Rope Hoists the rope drum, rope guide and the rope itself.
- ▶ Additionally, it may place the operator and personnel working near the crane at risk for injury.
- ▶ One of the main risks for an operator is load swing, which can damage the load or cause injury to the operator. In extreme cases, there might be a load drop.
- ▶ A rope that has been worn by side pulls may also snap and lead to a loss in control of the load.
- ▶ Cross pull or side pull may affect on monorail beam flanges, the beam web may deflect / distort, and beam flanges may wear causing uneven sides of beam.
- Preventing side pulls could lead to increases in both the safety and the lifetime of the components, customer should be educated at every interaction opportunity.
- The unfortunate prevalence of cross pulling-related accidents and maintenance needs repeated replacement of parts like chain guider roller, chain stripper, hook latch assembly, rope guide related parts i.e set of rope guide ring, spring and rope guide joining bracket.

Operational Note:

- Please be aware that as a safety feature, this rope guide ring is designed to snap in the event
 of the wrong usage of the rope hoist. As per IS 3938-2005 the angular lifting / pulling of dead
 weight is not allowed in wire rope hoist. If any user puts the rope hoist to such an application,
 the rope guide ring will not allow to perform the lifting. The rope guide ring will break if the
 fleet angle is more than 5 Deg. including angle between point of lift and dead weight kept on
 floor.
- The specific instruction in Do's and Don'ts is given hoist operating and maintenance manual. Those guidelines are based on past experience and safety standards of operation.
- The hoist in tandem application cannot be used because the load lifting speed and effort are not balanced in manual hoisting operation. Most important is load required to be cantered under hoist and load line of trolley centre and hook seating diameter centre should match. The hoists are designed for lifting load vertically. This phenomenon is applicable for all hoisting equipment's.


If hoist not used in proper way as mentioned above the warranty claims will not be accepted. Indicative list of parts not covered under warranty.



Indicative list of parts not covered under warranty:

1	Hoist Motor Winding
2	Wire Rope
3	Safety Latch assembly
4	Brake Disc – Hoist and Trolley
5	Brake Coil – Hoist and Trolley
6	Hoist and Cross Travel Limit Switch
7	Trolley Motor Winding
8	Pendent control
9	Relay and Fuse
10	Control Transformer
11	Rope Guide
12	Special Control Switchgears

This can cause damage to hoist

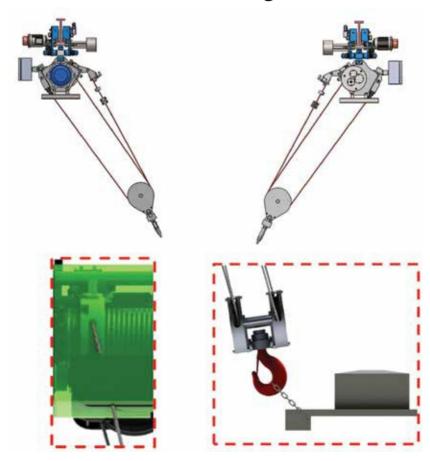



COMMISSIONING CHECK LIST (WRH)

- 1. Limit Switch: Check all limit switches like over hoisting, over lowering, right & left & emergency Check the direction of motions w.r.t. Pendent buttons change phase sequence if required.
 - This is very important safety requirement.
- 2. Sufficiency of lift: Set the bottom Limit switch so that hook touches the floor & no further Loosening of wire rope takes place. Set the top limit switch so that safe headroom is maintained between hoist body and lower block. Ensure that rope is not rubbing between L.B.
- 3. Angular Loading: Check that equipment is not subjected to angular loading. Ensure that equipment is installed at proper place proper hook approaches are used to prevent this.
- 4. Counter weight assembly: Ensure that counter weights are correctly assembled for balancing of trolley bolts are properly locked & tightened.
- 5. Noise level: Observed that there is no abnormal noise in Hoist and travel motion.
- 6. Greasing: Apply grease to the rope for full length & rope guide & ensure free movement
- 7. Name plate data: Note hoist, motor nos & record them on Instruction manual for future use.
- 8. Abnormal factors: Excessive dust, temp, humidity, chemical fumes, leakages etc. Report them.
- 9. Brake setting: Ensure that brake operation is not sluggish & load is not slipping. This is to certify that equipment is commissioned on and found satisfactory for use.



ERECTION & COMMISSIONING


Hoist has been designed for ease of erection. After removing side and top frames of wooden box you will find Hoist is bolted on the wooden bottom frames like pallet which can be lifted by fork lift truck.

Before erection of hoist adjust flange width of trolley to suit beam size providing equal numbers of washers on both sides between trolley side plate and suspension of hoist.

Check the distance between the wheel flanges. It should be 3 to 8mm more than the width of runway beam flange.

After adjusting the flange width check gear box, oil level, greasing of wire rope, trolley gears and pinions and then install the hoist on beam and remove wooden frame and packing girders.

Contact the hoist to 415 v, 3 phase power supply with 2.5mm sq. copper cable.

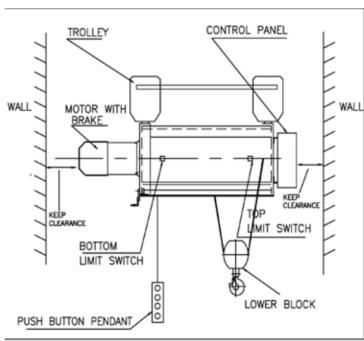

(CAUTION - DO NOT FORGET TO CONNECT EARTHING)

Now, cautiously operate Hoisting push button (see fig. 1) and observe Lower Block movement. In case It is coming down then interchange phase sequence.

Recheck the directions cautiously and operation of Top And Bottom Limit Switches. Adjust limit switches If required.

When everything is set observe movement from top to bottom of lower block without load. Then lift the load by few Cms. And observe that Brake is holding the load.

Now operate cross travel motion and fix proper end stoppers / LS actuation / Buffer on beam so that proper clearance is maintained with motor, Gear box and wall.



TROUBLE SHOOTING

TROUBLE	CAUSE	HOW TO SET RIGHT
Hoist does not start No contractor operates.	Phase sequence wrong or one phase failed or limit switch operated.	Change to phases of main supply. Check with lamp. Check movement of limit switch levers.
Hoist does not start Contractors are working.	Brake not opening or motor defect or overloaded.	Remove brake cover and see movement of brake plate. Check without load
Operation interrupted Chattering of contractors.	Loose connection or wire broken, current collector contact poor.	Tighten all connections. Check wires. Check sitting of shoe & free movement of arm
Push button gets stuck.	Push button sections shifted	Tighten the housing screw.
Braking time too long.	Brake liner is worn.	Adjust brake as per Instructions.
Brake & motor overheats.	Brake not properly opening incorrect air-gap.	Check brake air gap (see the instructions).

Grease		MP3 GREASE HP
Oil for Gear BOX		Oil - ENKLO 68 (M1-18-J-754)
Oil quantity without creep speed		For hoists with class 'F' insulation; which are exposed to higher temp. or for hoist with 3000 RPM motors
WRH N/N-HL	1.2 litre	use oil MP3 GREASE HP or equivalent.



SAFE OPERATING PROCEDURES FOR OVERHEAD CRANES / HOISTS & SLINGS

DO Not

- Lift more than rated capacity of Hoist.
- Operate Hoist with twisted, kinked or damaged hoistrope
- Operate if rope is not seated in drum or sheave grooves.
- Lift unless load slings are centered on hook.
- Lift people or travel with people on load.
- Make side pulls which misalign rope with hoist.
- Operate unless all travel limit devices are functioning.
- Lower below point where less than two full wraps of rope remain on hoist drum.
- Use upper limit switch to stop hoist limit which is emergency stop only.
- Leave operating position with suspended load on hook.
- Permit load to contact obstacles.
- Exceed recommended duty cycle.
- Use Hoist Rope or chain as a sling or as an earthing for welding.
- Divert his attention while operating.
- Remove or obliterate warning label
- Exceed fuse rating.

CAUTIONS

WHENEVER LEAVING OR PARKING ANY HOIST OR CRANE

- Raise all hook to-but not through-limit switches.
- Place all controls in off position
- Place main power switch in off position.
- Make visual check for any dangerous condition & report any defect immediately.
- Report to supervisor when Hoist is not in operation.
- Take up slacks, than start load slowly.
- Keep chains free from twists, knots & knits.
- Lift form Center of hooks. Avoid lifting form points.
- Distribute load evenly on all legs.
- Inspect chain regularly.
 Remember elongation of links is a sign of overloading.
- A sharp edge can cut the lift of your sling. Use blocking padding or a corner saddle.
- Remove knots large enough for the load.
- Don't jerk loads- jerking may double the stress in your sling. Lift load gradually.



DO

- Test hoist & travel limit devices at a start of each shift.
- Position the Hoist so that lifting appliance is directly over the load.
- Take load gently & avoid shock loads.
- Ensure the travel path is clear before traveling.
- Sound warning single when approaching personnel.
- Balancer the loading sling before lifting more than few inches.
- Test hoist brakes whenever lifting load approaching rated load capacity. Lift load a few inches & test hoist brakes before making complete lift.
- Make visual checks on equipment at reasonable intervals & report the defects immediately.
- Use controller to "stop" hoist not limit switch.
- Watch for proper rigging on load before lifting.
- Know standard hand signals.
- Check Lubricants.
- Check for proper phasing.
- Always anchor outdoor hoists when not attended.
- Keep load block safely overhead when not in use.



WIRE ROPE AND ROPE GUIDE RING ASSEMBLY


If wire rope shows broken wires on its length more than 10% or considerable plastic wear, severe corrosion, Kinks, loose strands, then it should be replaced with original rope as suggested by supplier.

For removing and assembling rope guide ring nut (halves), distance beam (A) need to be positioned as shown in Fig. 8 before starting the rope unwinding/winding on the drum by removing one bolt (c) from each side and Loosening other bolts.

ASSEMBLY PROCEDURE:

- Step 1 : Clamp wire rope end with 2 Nos. clamping washer (B) firmly on drum. Then wind at least 10 turns with grease on the rope and drum, pulling the rope by hand, so that rope is not loose on the drum.
- Step 2 : Keep the rope in tension by pulling or clamping and at the same time assemble rope guide Ring (part Z) on drum from bottom of the drum so that thread of part Z will come in adjacent groove (i.e. 11th groove).
- Step 3: While putting the spring over rope, to ensure rope is not getting loose, lock the part Z by Wedge (E) as shown in Fig. 8.
- Step 4 : After ensuring above, assemble spring (D) on top of wound rope through groove in rope guide Ring and entangle its end (use 2 Nos. of cord or wires for pulling springs in opposite direction For assembly pf spring ends). Close spring ends properly by using plier so that ends do not Entangle with rope.
- Step 5 : Remove wedge and push the part (Z) of rope guide at top so that part (Y) of rope guide can also Be assembled from bottom side of the drum.
- Step 6: Then assemble rope guide ring joining brackets (F) & (G) as shown in Fig. 9. (Ensure that bolt Length is not more, causing pressing of rope).
- Step 7 : Assemble distance beam (A) in position as shown in Fig. 9.
- Step 8: Now wind the entire rope length such that 2 grooves are empty at the end of drum and Proper Head room is maintained after Top Limit Switch (L) is actuated. (Adjusted counter weight (P) by Maintaining (Q) dimension as per guidelines given in Fig. 8).
- Step 9: Now adjust brass screw (K) such that actuator/joining bracket (F) operates Top Limit Switch (L) While hoisting and Bottom Limit Switch (L) is actuated. (Adjust counter weight (P) by Maintaining (Q) dimension as per guideline given in Fig. 8).
- Step 10 : Now set the limit Switch (L) & (M) by moving them axially to restrict upper and lower limits If required by application.
- Step 11 : Ensure that 'U' Clamps (N) are assembled properly as shown in Fig. 9.



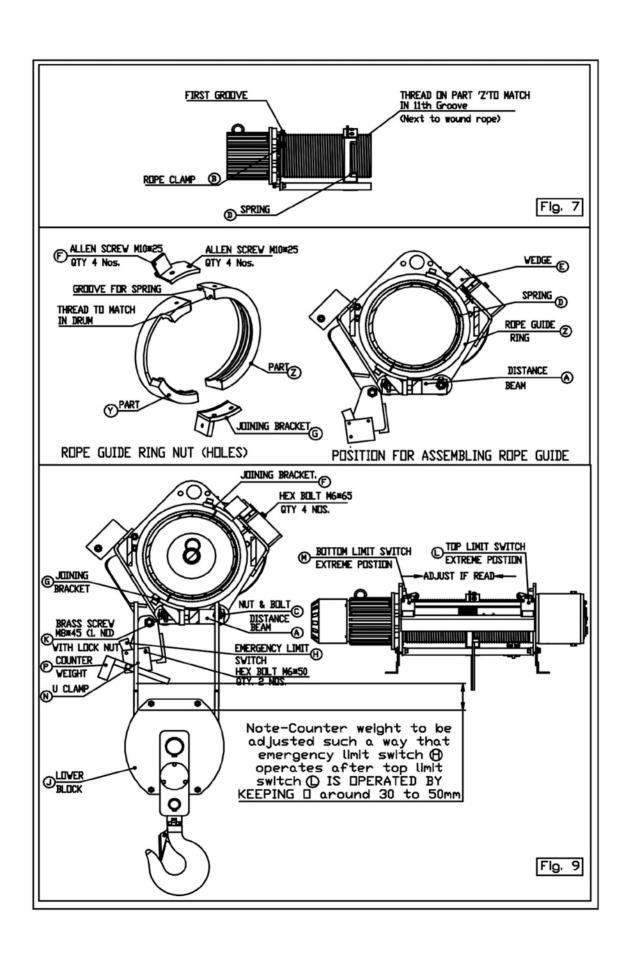



RECOMMENDED INSPECTION AND MAINTENANCE SCHEDULE

TIME INTERVAL

INSPECTION OR MAINTENANCE

Daily or start of each shift (visual)

- ▶ Check operation of all functional mechanisms including limit switch operation, brakes and control. Report any defect found to properly authorized supervisor & notify the next operator of the defects at the change of the shift.
- ▶ Visually inspect each component of the crane normally used in lifting the load, traveling or lowering the load. This inspection should include, but not be limited to, the items as follow:
- a. Wire Rope: Inspect for kinks or broken wire or evidence of improper spooling on drum & replace seriously damaged ropes immediately.
- b. A functional operating mechanisms such as sheaves, drums & brakes.
- c. Visually inspect entire crane for the sings of damage which might cause unsafe immediately.
- d. All limit switches of hoisting, Lowering, Cross Travel or swiveling.
- e. Inspect hooks, lower blocks, and all load bearing components for damage.

1 - 3 Months

- ▶ The result of monthly inspection should be carefully recorded in the suitable log book, in full details, & should be details, & should be dated signed by the inspector.
- ▶ The purpose of the monthly inspection is to find & correct any wear, damage, or defect, which should affect the safe operation of the machine. This should include the items listed under the daily inspection as well as the following:

Inspect the Electrical Controls.

- a. Check hoist gear box oil level.
- b. Inspect the entire crane or hoist for structural damages.
- c. Inspect for cracked or worn sheave, drums, wheels, rails.
- d. Inspect for worn, cracked or distorted components such as pins, bearing, shaft & gears.
- e. The current collector system should be thoroughly checked & maintained. The contact tips & case of DSL systems should be checked & cleaned regularly.



RECOMMENDED INSPECTION AND MAINTENANCE SCHEDULE

TIME INTERVAL

INSPECTION OR MAINTENANCE

- f. Inspect for excessive wear on brake system parts, linings, pawls, & ratchets. Be sure pawls & ratchets operate correctly, are in good condition & are properly lubricated. Check the conditions of the fire extinguisher, if furnished.
- g. Inspect all motors, controls, & conductor systems which might in any way affect the safety of the machine.
- h. Entire crane or hoist structure, especially surrounding the drive should be thoroughly cleaned.

6 Months

- ▶ Lower Block
- ▶ Rope Guide

 \blacktriangleright

Lubricate hoist wire rope, Lower block, outboard bearing cartridge at grease fitting.

ANNUALLY

At least annually, the crane hook should be inspected for check by magnetic particle or other suitable crack testing inspection method, to determine that no cracks are discernible. A 15% increase in the throat measurement of hook or a 10% bend in the hook shall be considered cause for replacement.

The above visual & operational checks will take only a few minutes at the beginning of each shift, & are absolutely necessary to ensure safe operation.


* Complete inspection, disassembly and maintenance required. It is recommended that your HERCULES HOISTS LIMITED repair Station be contacted for this service.

INSPECTION WHEN REQUIRED:

The third type of inspection concerns individual incidents which apply sudden & unusual stress, or possible damage due to any cause. All such incidents which might affect the safe operation of crane should be followed by an immediate & thorough inspection of the crane, using all necessary non-destructive test methods. All repairs found necessary should be made before the machine is returned to service.



WRH N - MAINS SPARE PART LIST

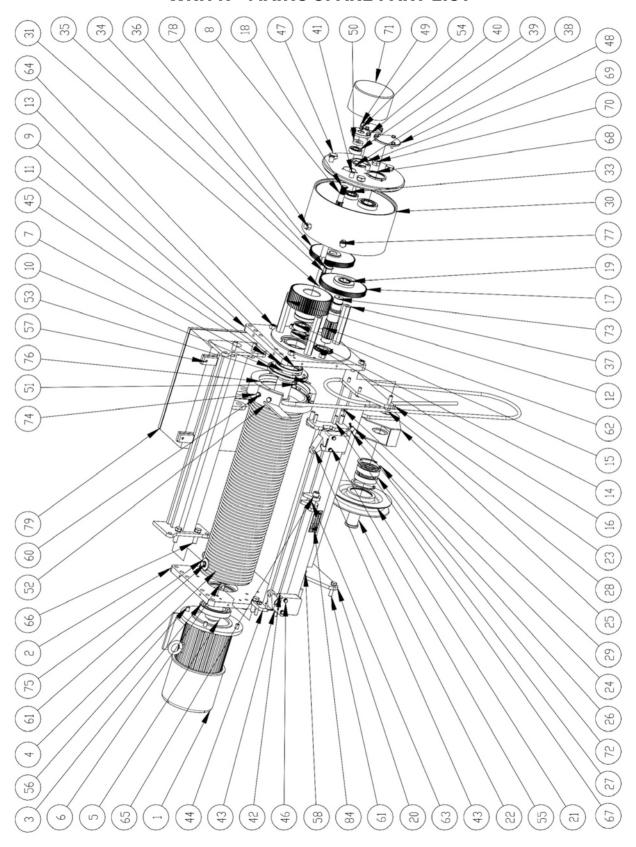



PART NO.	PART CODE	DESCRIPTION	QTY.
1	XMRP006000*	HOIST MOTOR	1
2	PNCA133030B	MOTOR END SHEILD	1
3	BBR060130000	BALL BEARING 6013	2
4	PNAY133001B	DRUM COMPLETE (LIFT 5.2 MTRS)	1
	PNBY133001B	DRUM COMPLETE (LIFT 8.2 MTRS)	
	PNDY133001B	DRUM COMPLETE (LIFT 11.2 MTRS)	
5	PNCA823052C	COUPLING MOTOR SIDE	1
6	PNAA823050C	INTERMEDIATE AXLE (LIFT 5.2 MTRS)	1
	PNBA823050C	INTERMEDIATE AXLE (LIFT 8.2 MTRS)	
	PNDA823050C	INTERMEDIATE AXLE (LIFT 11.2 MTRS)	
7	PNCA823051B	COUPLING GEAR SIDE	1
8	PNCA813021C	MAIN SHAFT	1
9	PNCA133028B	GEAR BOX PLATE	1
10	PNCA833281A	OIL SEAL HOUSING (DRUM GEAR)	1
11	OS0650860800	OIL SEAL 65*86*8	1
12	PNCA813024B	DRUM GEAR *W100-24	1
13	EXCRA0650000	EXTERNAL CIRCLIP A 65	1
14	OS0250520800	OIL SEAL 25*52*8	1
15	BBR062050000	BALL BEARING 6205	1
16	BTR302060000	TAPER ROLLER BEARING 30206	2
17	PNCA812232B	2ND BACK GEAR WHEEL	1
18	EXCRA0170000	EXTERNAL CIRCLIP A17	1
19	EXCRA0350000	EXTERNAL CIRCLIP A35	1
20	PZAA133042A	GUIDE PULLEY SUSPENSION BEAM (LIFT 5.2 MTRS)	1
	PZBA133042A	GUIDE PULLEY SUSPENSION BEAM (LIFT 8.2 MTRS)	
	PZDA133042A	GUIDE PULLEY SUSPENSION BEAM (LIFT 11.2 MTRS)	
21	PNCJ013011B	WHEEL	1
22	PNCJ823012B	AXLE	1
23	PNCJ833013A	BUSH FOR LOWER BLOCK	1
24	PZCK823027B	SUSPENSION PIN	1
25	PNCN823061A	SUSPENSION BOLT	1
26	INCRB0720000	INTERNAL CIRCLIP A 72	2




PART NO.	PART CODE	DESCRIPTION	QTY.
27	BBR06207ZZ00	BALL BEARING 6207-ZZ/2RS	2
28	ASHM10200000	ALLEN SCREW M10*20	1
29	FLSPWB100000	FLAT SPRING WASHER B10	5
30	YNCA123029A	GEAR BOX CASING TUBE	1
31	PNCA812221B	1ST BACK GEAR PINION	1
32	KO1200500330	KEY - OER 12*8*33	1
33	BTR302040000	TAPER ROLLER BEARING 30204	2
34	EXCRA0240000	EXTERNAL CIRCLIP A 24	1
35	KO0800700185	KEY OER 8*7*18.5	1
36	PNCA812222B	1ST BACK GEAR WHEEL	1
37	PNCA943025A	GEAR BOX BOLT	3
38	PNCA053027B	GEAR BOX PLATE (OUTSIDE) *	1
39	BBR06203RS00	BALL BEARING 6203-2RSR/ZZ	1
40	PNCA833273A	CAP FOR MAIN SHAFT	1
41	PFCA883614A	SPACER	3
42	PNCA833091B	LIMIT SWITCH CLAMP	2
43	XLSP0070SLZ	LIMIT SWITCH	2
44	P2AY133042B	ROPE SUSPENSION BEAM (LIFT 5.2 MTRS)	1
	P2BY133042B	ROPE SUSPENSION BEAM (LIFT 8.2 MTRS)	
	P2DY133042B	ROPE SUSPENSION BEAM (LIFT 11.2 MTRS)	
45	P1AY133043B	PULLEY SUSPENSION BEAM (LIFT 5.2 MTRS)	1
	P1BY133043B	PULLEY SUSPENSION BEAM (LIFT 8.2 MTRS)	
	P1DY133043B	PULLEY SUSPENSION BEAM (LIFT 11.2 MTRS)	
46	HBHM06065088	HT HEX BOLT M6*65 GR:8.8	4
47	HBHM14035088	HEX BOLT M14*35	3
48	PNCA833271A	CAP FOR 2ND BACK GEAR	1
49	PNCA833272A	CAP FOR 1ST BACK GEAR	1
50	OS0170350700	OIL SEAL 17*35*7	1
51	PNCY013083B	ROPE GUIDE RING	1
52	P1CY133084B	R.H. ROPE GUIDE RING JOINING BRACKET	1
53	PNCY133085A	R.H.ROPE GUIDE RING JOINING BRACKET	1
54	HBHM06016088	HEX BOLT M6*16	9



PART NO.	PART CODE	DESCRIPTION	QTY.
55	FLSPWB060000	FLAT SPRING WASHER B6	19
56	HBHM10025088	HT HEX BOLT 10*25	4
57	HBHM06020088	HT HEX BOLT M6*20.	6
58	HBHM08025000	HT HEX BOLT M8*25	4
59	FLSPWB100000	FLAT SPRING WASHER B10	7
60	FLSPWB080000	FLAT SPRING WASHER B8	12
61	HBHM10040088	HT HEX BOLT 10*40	7
62	HNMM010000YZ	HEX NUT M10	4
63	ASHM12050000	ALLEN SCREW M12 *50	1
64	HNMM012000YZ	HEX NUT M12	9
65	FLSPWB120000	FLAT SPRING WASHER B12	9
66	HBHM12040088	HT HEX BOLT M12*40	8
67	ASHM08040000	ALLEN SCREW M8*40	4
68	PACC113283A	SHIM 61.5*52*1.0	1
69	PACC113284A	SHIM 61.5*52*0.5	1
70	PACE173301A	OIL LEVEL INDICATOR	1
71	XBAP0040SYT	HOIST BRAKE	1
72	SCP040300000	SPLIT COTTER PIN 4*30	2
73	PNCA812231B	2ND BACK GEAR PINION	1
74	HBHM08025088	HT HEX BOLT M8*25 GR 8.8	4
75	PNCY133014A	ROPE CLAMP	3
76	PNCY243831A	TENSION SPRING	1
77	HBHM12016046	MILD STEEL HEX BOLT M12* 16	2
78	PACF193291B	OILSCREW M12*15	1
79	0371609B	CONTROL PANEL	1
85	FLSPWB140000	FLAT SPRING WASHER B14	3
85	WRF010060370	WIRE ROPE 2F	15.3 M
		WIRE ROPE 2F	21.3 M
		WIRE ROPE 2F	27.3 M
		WIRE ROPE 3F	17.7 M
		WIRE ROPE 3F	23.7 M
		WIRE ROPE 3F	29.7 M



WRH N HL - MAINS SPARE PART LIST

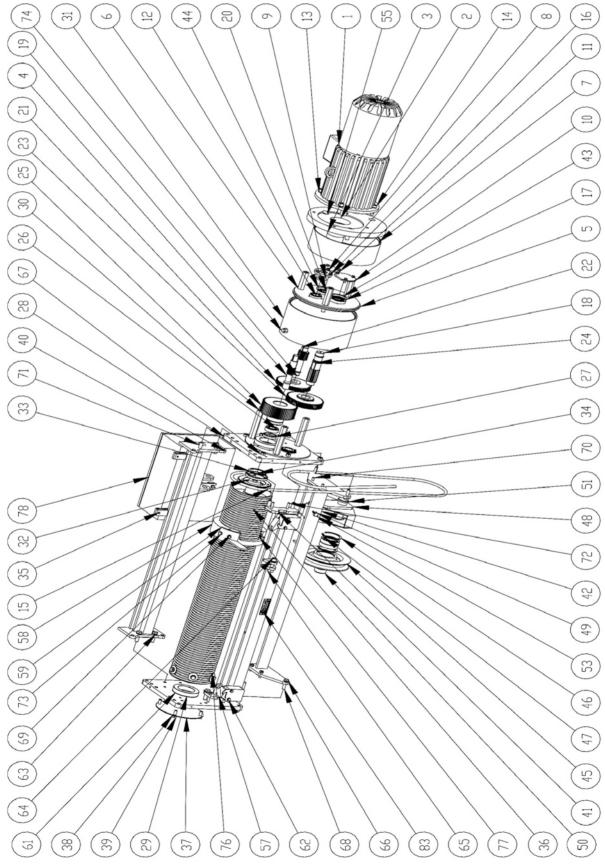



PART NO.	PART CODE	DESCRIPTION	QTY.
1	XMRP001000*	HOIST MOTOR	1
2	YNCA053277A	MOTOR MOUNTING PLATE	1
3	UHCB003025A	LOVEJOY COUPLING	1
4	YNCA813021B	MAIN SHAFT	1
5	YNCA053027A	GEAR BOX PLATE	1
6	YNCA943251A	COUPLING HOUSING BOLT	3
7	YNCA873278A	COUPLING HOUSING TUBE	1
8	YNCA833273A	CAP FOR MAIN SHAFT	1
9	OS0250400600	OIL SEAL 25*52*8	1
10	PNCA833271A	CAP FOR 2ND BACK GEAR	1
11	PNCA833272A	CAP FOR 1ST BACK GEAR	1
12	BBR060050000	BALL BEARING 6005	1
13	FLSPWB120000	FLAT SPRING WASHER B12	4
14	ASHM12035000	ALLEN SCREW M 12* 35	4
15	FLSPWB060000	FLAT SPRING WASHER B6	19
16	HBHM06016088	HEX BOLT M6*16	9
17	BTR302060000	TAPER ROLLER BEARING 30206	2
18	PNCA812231B	2ND BACK GEAR PINION	1
19	YNCA812221B	1ST BACK GEAR PINION	1
20	BTR302040000	TAPER ROLLER BEARING 30204	2
21	YNCA812222B	1ST BACK GEAR	1
22	KO0800700185	KEY OER 8*7*18.5	1
23	YNCA812232B	2ND BACK GEAR	1
24	KO1200500330	KEY - OER 12*8*33	1
25	PNCA813024B	DRUM GEAR	1
26	BBR062050000	BALL BEARING 6205	1
27	OS0250520800	OIL SEAL 25*52*8	1
28	PNCA133028B	GEAR BOX PLATE	1
29	BBR060130000	BALL BEARING 6013	2
30	PNCA943025A	GEAR BOX BOLT	3
31	YNCA123029A	GEAR BOX CASING TUBE	1
32	PNCA833281A	OIL SEAL HOUSING	1



PART NO.	PART CODE	DESCRIPTION	QTY.
33	EXCRA0650000	EXTERNAL CIRCLIP A 65	1
34	OS0650860800	OIL SEAL 65*86*8	1
35	HBHM06020088	HT HEX BOLT M6*20	6
36	PNEY133001B	DRUM COMPLETE (LIFT 17.2 MTRS)	1
	PNGY133001B	DRUM COMPLETE (LIFT 25 MTRS)	
37	YNCA113302A	COVER	1
38	FLSPWB100000	FLAT SPRING WASHER B10	8
39	HBHM10025088	HT HEX BOLT 10*25	4
40	P1EY133043B	PULLEY SUSPENSION BEAM (17.2 MTRS)	1
	P1GY133043B	PULLEY SUSPENSION BEAM (LIFT 25 MTRS)	
41	P2GY133042B	ROPE SUSPENSION BEAM (LIFT 17.2 MTRS)	1
	P2GY133042B	ROPE SUSPENSION BEAM (LIFT 25 MTRS)	
42	PZEA133042A	GUIDE PULLEY SUSPENSION BEAM (LIFT 17.2 MTRS)	1
	PZGA133042A	GUIDE PULLEY SUSPENSION BEAM (LIFT 25 MTRS)	
43	PACC113283A	SHIM 61.5*52*1.0	1
44	PACC113284A	SHIM 61.5*52*0.5	1
45	PNCJ013011B	WHEEL	1
46	INCRB0720000	INTERNAL CIRCLIP A 72	2
47	BBR06207ZZ00	BALL BEARING 6207-ZZ/2RS	2
48	PNCN823061A	SUSPENSION BOLT	1
49	PZCK823027B	SUSPENSION PIN	1
50	PNCJ833013A	BUSH FOR LOWER BLOCK	1
51	PNCJ823012B	AXLE	1
52	ASFM10020000	ALLEN SCREW M10*20	1
53	SCP040300000	SPLIT COTTER PIN 4*30	2
54	FLSPWB140000	FLAT SPRING WASHER B14	3
55	HBHM14035088	HEX BOLT M14*35	3
56	PNCA833091B	LIMIT SWITCH CLAMP	2
57	XLSP0070SLZ	LIMIT SWITCH	2
58	PNCY013083B	ROPE GUIDE RING	1
59	P1CY133084B	R.H. ROPE GUIDE RING JOINING BRACKET	1


INDEF WRH N-N HL WIRE ROPE HOIST



PART NO.	PART CODE	DESCRIPTION	QTY.	
60	PZCY133085A	R.H. ROPE GUIDE RING JOINING BRACKET	1	
61	PNCA133030B	MOTOR END SHEILD	1	
62	HBHM06065088	HEX BOLT M6*65	4	
63	FLSPWB120000	FLAT SPRING WASHER B12	9	
64	ASHM12050000	ALLEN SCREW M12 *50	1	
65	HNMM012000YZ	HEX NUT M12	1	
66	FLSPWB100000	FLAT SPRING WASHER B10	4	
67	HNMM01000YZ	NEX NUT M10	12	
68	HBHM10040088	HEX BOLT M10*40	7	
69	FLSPWB080000	FLAT SPRING WASHER B8	12	
70	HBHM08025000	HT HEX BOLT M8*25	4	
71	HBHM12040088	HT HEX BOLT M12*40	8	
72	ASHM08040000	ALLEN SCREW M8*40	4	
73	HBHM08025088	HT HEX BOLT M8*25 GR 8.8	4	
74	PACF193291B	OILSCREW M12	1	
75	HBHM12016046	MILD STEEL HEX BOLT M12* 16	2	
76	PNCY133014A	ROPE CLAMP	3	
77	PNCY243831A	TENSION SPRING	1	
78	0371609B	CONTROL PANEL	1	
82	WRF010060370	WIRE ROPE 2 FALL	17.2 M	
		WIRE ROPE 2 FALL	25 M	
		WIRE ROPE 3 FALL	41.7 M	
		WIRE ROPE 3 FALL	51.7 M	
Please ref	Please refer for Motor Part Code '*' Details (BBL/IND)			



ELECTRIC TROLLEY

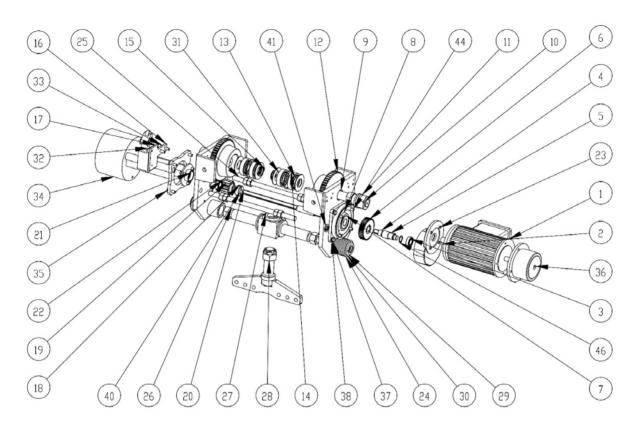


PART NO.	PART CODE	DESCRIPTION	QTY.
1	XMRP028000*	TROLLEY MOTOR	1
2	PACF023029B	GEAR BOX HOUSING	1
3	BBR060030000	BALL BEARING 6003	1
4	PACF813022C	DRIVE SHAFT	1
5	KO0600600180	KEY 6X6X18	1
6	PACF813031B	GEAR WHEEL	1
7	BBR060050000	BALL BEARING 6005	1
8	PACF013028B	GEAR BOX COVER	1
9	PNC4133011B	GEAR WHEEL TROLLEY SIDE PLATE	2
10	PNC4823015B	WHEEL AXLE	2
11	FLSPWB300000	FLAT SPRING WASHER B30	2
12	PNC4013013B	GEARED WHEEL	2
13	BBR06260000	BALL BEARING 6206	4
14	INCRB0620000	INTERNAL CIRCLIP B 62	2
15	EXCRA0300000	EXTERNAL CIRCLIP A 30	2
16	PNC4133065A	LIMITSWITCH MOUNTING BRACKET	1



PART NO.	PART CODE	DESCRIPTION	QTY.				
17	XLSP0090SLZ	LIMIT SWITCH	1				
18	PACF833020B	CLAMPING WASHER	1				
19	PACF823017C	WHEEL PINION	2				
20	PBCF823018C	PINION SHAFT	1				
21	PACF833021B	BEARING HOUSING	1				
22	BBR06003ZZ00	BALL BEARING 6003-ZZ/2RS	1				
23	HBHM08016088	HT HEX BOLT M8*16	7				
24	MGCM113014A	ADJUSTMENT WASHER 36*60*5	24				
25	PCCF833027A	DISTANCE BOLT	2				
26	PNC5843064A	LOAD AXLE	1				
27	BTB511070000	THRUST BEARING 51107	1				
28	PNC5133060A	HOIST SUSPENSION	1				
29	FLSPWB240000	FLAT SPRING WASHER B24	2				
30	PACF113113A	WASHER 25 *50 *5	4				
31	PNC4113016A	BEARING SIDE COVER	4				
32	ASFM05016000	ALLEN SCREW (SHCS) M 5*16	3				
33	ASFM08025000	ALLEN SCREW M8*25	2				
34	PNC4133069A	COUNTER WEIGTH	1				
35	HBHM08025000	HT HEX BOLT M8*25	4				
36	XBAP0060SYT	TROLLEY BRAKE	1				
37	HBHM08035088	HEX BOLT 8*35	4				
38	FLSPWB080000	FLAT SPRING WASHER B-8	13				
39	HNMM008000YZ	HEX NUT M8 YELLOW ZINC PLATED	4				
40	FLSPWB050000	FLAT SPRING WASHER B5	3				
41	FLSPWB160000	FLAT SPRING WASHER B16	4				
42	FLSPWB080000	FLAT SPRING WASHER B8	4				
43	INCRB0470000	INTERNAL CIRCLIP B47	1				
44	ASFM08030000	ALLEN SCREW M 8*30	4				
45	SQSPW0080000	SQUARE SPRING WASHER M8	4				
46	EXCRA0200000	(A) EXTERNAL CIRCLIP A 20	1				
Please ref	Please refer for Motor Part Code '*' Details (REM/IND/ELE)						



PLAIN TROLLEY

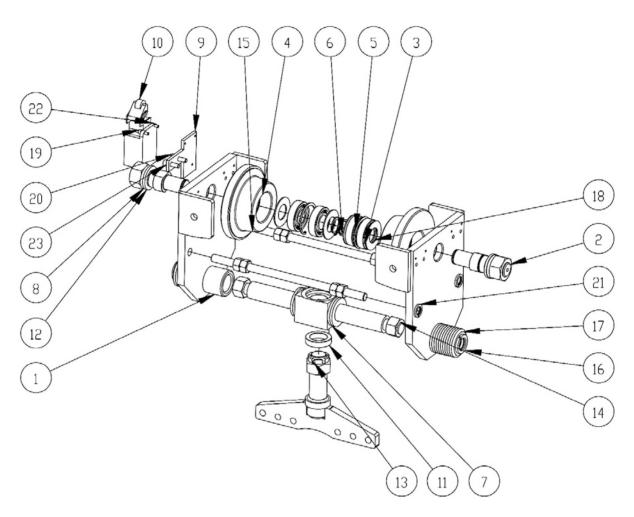

ITEM NO.	PART CODE	DESCRIPTION	QTY.
1	PNC4133012B	PLAIN WHEEL SIDE PLATE	2
2	PNC4823015B	WHEEL AXLE	2
3	BBR06206ZZ00	BALL BEARING 6206ZZ	4
4	PNC4013014B	PLAIN WHEEL	2
5	INCRB0620000	INTERNAL CIRCLIP B 62	2
6	EXCRA0300000	EXTERNAL CIRCLIP A 30	2
7	MGCM113014A	ADJUSTMENT WASHER 36*60*5*	24
8	FLSPWB300000	FLAT SPRING WASHER B30	2
9	PNC4133065A	LIMIT SWITCH MOUNTING BRACKET	1
10	XLSP0090SLZ	LIMIT SWITCH	1


INDEF WRH N-N HL WIRE ROPE HOIST



ITEM NO.	PART CODE	DESCRIPTION	QTY.
11	BTB511070000	THRUST BEARING 51107	1
12	PACF113023A	SPACER 33 I.D.	2
13	PNC5133060A	HOIST SUSPENSION	1
14	PNC5843064A	LOAD AXLE	1
15	PCCF833027A	DISTANCE BOLT	2
16	FLSPWB240000	FLAT SPRING WASHER B24	2
17	PACF113113A	WASHER 25*50*5	2
18	PNC4113016A	BEARING SIDE COVER	4
19	ASFM05016000	ALLEN SCREW 5*16	2
20	ASFM08025000	ALLEN SCREW M8*25	2
21	FLSPWB160000	FLAT SPRING WASHER B16	4
22	FLSPWB050000	FLAT SPRING WASHER B5	2
23	FLSPWB080000	FLAT SPRING WASHER B-8	2



GEARED TROLLEY

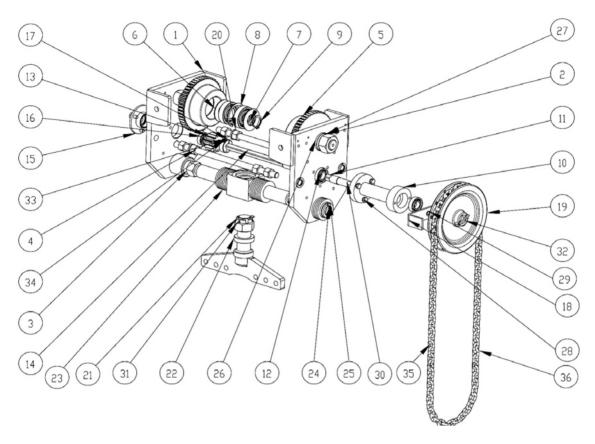




ITEM NO.	PART CODE	DESCRIPTION	QTY.
1	PNC4133011B	GEAR WHEEL TROLLEY SIDE PLATE	2
2	PNC4823015B	WHEEL AXLE	2
3	PNC5843064A	LOAD AXLE	1
4	PCCF833027A	DISTANCE BOLT	2
5	PNC4013013B	GEARED WHEEL	2
6	PNC4113016A	BEARING SIDE COVER	4
7	BBR062060000	BALL BEARING 6206	4
8	INCRB0620000	INTERNAL CIRCLIP B 62	2
9	EXCRA0300000	EXTERNAL CIRCLIP A 30	2
10	PACG133028A	DRIVE SHAFT HOUSING	1
11	PACG823022D	DRIVE SHAFT	1
12	BBR06004ZZ00	BALL BEARING 6004ZZ	2
13	PACF823017C	WHEEL PINION	2
14	PBCF823018C	PINION SHAFT	1
15	PACF833021B	BEARING HOUSING	1
16	BBR06003ZZ00	BALL BEARING 6003-ZZ/2RS	1
17	PACF833020B	CLAMPING WASHER	1
18	PACG852024A	HAND CHAIN GUIDE	1
19	MECM023022A	HAND CHAIN WHEEL	1
20	FLSPWB160000	FLAT SPRING WASHER B16	8
21	PNC5133060A	HOIST SUSPENSION	1
22	BTB511070000	THRUST BEARING 51107	1
23	MGCM113014A	ADJUSTMENT WASHER 36 * 60 * 5	24
24	PACF113113A	PLAIN WASHER 25*50*5	2
25	FLSPWB240000	FLAT SPRING WASHER B24	2
26	PACF113023A	SPACER 33 I.D * 50 * 5	2
27	FLSPWB300000	FLAT SPRING WASHER B30	2
28	FLSPWB080000	FLAT SPRING WASHER B8	8
29	HBHM08016088	HEX BOLT M8*16	5
30	HBHM08035088	HEX BOLT M8*35	3
31	SCP060060000	SPLIT COTTER PIN 6*55	1
32	DSP060040000	DOWEL SPRING PIN 6*40 1	
33	FLSPWB050000	FLAT SPRING WASHER B-5	1
34	ASHM05020000	ALLEN SCREW M5*20	1
35	CHHYN0601804	HAND CHAIN 6 * 19* 20.5	-
36	CHJL060180YZ	HAND CHAIN JOINING LINK	1




LOWER BLOCK - 2 FALL

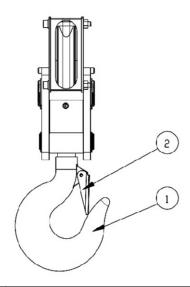

PART NO.	PART CODE	DESCRIPTION	QTY.
	0390601P	2T LOWER BLOCK ASSLY	
1	PNCJ003020B	HOOK WITH SAFETY LACTH ASSLY	1
2	CAAS003140A	HOOK LATCH ASSLY	1


LOWER BLOCK - 3 FALL

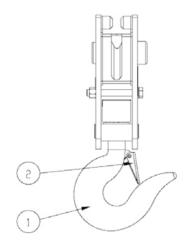

PART NO.	PART CODE	DESCRIPTION	QTY.
	0370602P	3T LOWER BLOCK ASSLY	
1	PZCK000101A	HOOK WITH SAFETY LACTH ASSLY	1
2	CCBS003127B	HOOK LATCH ASSLY	1



TROLLEY & HOIST BRAKE SPARE PART LIST

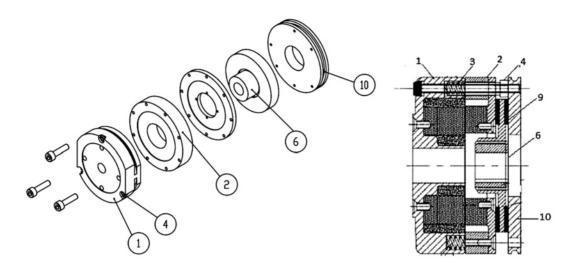

PART NO.	PART CODE	DESCRIPTION
	XBAP0060SYT	MAIN BRAKE
1	XBAP01610SSYT	STATOR
2		ARMATURE ASSEMBLY
3		TUBULAR SPRING EACH SET
4	XBAP87210SSYT	MOUNTING FLANGE ASSLY
6		BRAKE DISC & BRAKE LINER (ROTOR / GEAR HUB)
10	XBAP00510SYT	MOUNTING FLANGE

HOIST BRAKE SPARE PARTS

PART NO.	PART CODE	DESCRIPTION
	XBAP0040SYT	MAIN BRAKE
1	XBAP02370SSYT	STATOR
2		ARMATURE ASSEMBLY
3		TUBULAR SPRING EACH SET
4	XBAP54170SSYT	MOUNTING FLANGE ASSLY
6		BRAKE DISC & BRAKE LINER (ROTOR / GEAR HUB)
10	XBAP00520SYT	MOUNTING FLANGE



TROLLEY & HOIST BRAKE

MAINTENANCE / REPAIR

TROUBLE	POSSIBLE CAUSE	REQUIRED ACTION
Brake does not apply	No mains voltage.	Check supply voltage.
No braking action	Stator (coil) open.	Brake coil resistance to be checked as per the technical data.
	Armature plate Jammed (without moment)	Springs, guide bushes must be checked and overhauled (cleaned properly).
Brake action too slow, insufficient braking effect	Oil or grease on the friction lining	Replace rotor, prevent oil/grease from coming in contact with friction liner.
	Spring are present/broken	Dismantle brake, loosen sleeves insert new springs.
	Brake limning worn-out	Replace rotors (armature plate and flange if very badly worn-out).

To ensure safe & trouble free operation, Spring Loaded Brakes must be checked and maintained at regular intervals. SYTCO Spring Loaded Brakes are wear – resistant and designed for trouble free longer life. The Friction Liners are subject to function -related wear. The Brakes must be checked and readjusted at regular intervals & if necessary, it should be replaced.

PRINCIPLE OF OPREATION: This type of brake consists of stator, Armature, Rotor & Mounting flange. Current is given to stator (coil), the armature plate is attracted to the stator against the spring force thus releasing the rotor. When current is off, strong compression springs push the armature plate back to its position thus clamping the rotor in between armature & mounting flange and providing necessary braking torque.

INSTALLATION: Mounting flange (10) has to be mounted on motor/machine body which should at right angle to the motor/machine shaft as well as centered internally and externally may be with the help of spigot. The hub (6) has to be fitted on shaft with the help of key and axial retainer (circlip) and Rotor (9) on that. Stator (1) with Armature Assembly (2) has to be fitted on the Mounting flange (10) with the help of provided Allen bolt (8) through adjustment Hollow Bushes (4). The air gap should be adjusted by adjustable Hollow Bushes. To reduce air gap, rotate all bushes equally clockwise. Air gap should be within limits as per following table, initially it should be nominal.

INDEF WRH N-N HL WIRE ROPE HOIST



Brake size	05	10	20	40	70	90	160	250
Nominal air gap mm	0.2	0.3	0.3	0.3	0.3	0.4	0.5	0.5
Maximum air gap mm	0.5	0.7	0.7	0.7	0.8	1.0	1.0	1.0

MAINTANENCE: SYTCO Fail Safe Brakes are almost maintenance free. For this periodicity depends on application to application, operating frequency, system inertia to be stopped etc. air gap can be adjusted by rotating adjustable Hollow Bushes to reduce air gap. Rotate all bushes anti-clockwise and check from all sides by filler gauge and vice-versa.



TYPICAL CASES OF WRONG FITMENT

Typical case of uneven air gap in brake disc: This should be noticed and avoided during preventive maintenance.



Typical case of stator resting bolt head, which will restrict the stator lateral movement of brake disc: This should be noticed and avoided during preventive maintenance.



Typical case of stator fitting, the half-moon slot is to clear the bolt head, brake housing fitment wrong, which will obstruct the stator lateral movement of brake disc: This should be noticed and avoided during preventive maintenance.






TYPICAL CASES OF WRONG WIRING

The RYB colour code of connecting cables to be maintained and wiring connections to be followed accordingly. The supply voltage is 415+/-10% for all AC brakes. The power supply fluctuations will have effect on brake coil first than motor as coil are more sensitive than motor windings.

HOIST BRAKE SPARE PARTS

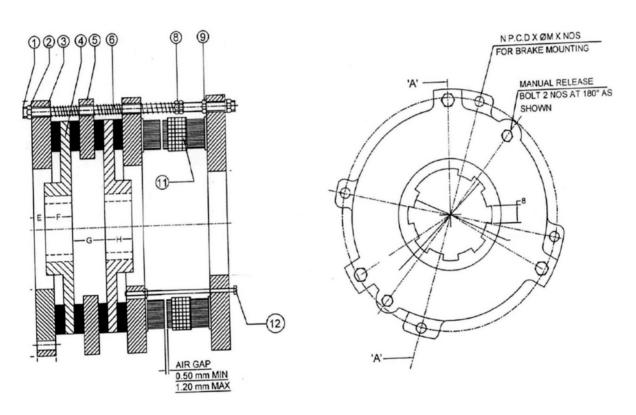

PART NO.	PART CODE	DESCRIPTION
	XBAP0030PTA	MAIN BRAKE
1	XBAP0033PTA	STUD
2	XBAP0032PTA	LOCK NUT
3	XBAP0038PTA	MOUNTING PLATE
4	XBAP0036PTA	FRICTION DISC
5	XBAP0037PTA	DUMMY PLATE
6	XBAP0034PTA	RELEASE SPRING
8	XBAP0035PTA	SPRING COMP, NUT, & LOCK NUT
9	XBAP0031PTA	GAP ADJU. NUT & LOCK NUT
11	XBAP0026PTA	COIL
12	XBAP0330PTA	RELEASE BOLT



HOIST BRAKE

SAFETY PRECAUTIONS


- 1. To prevent electrical mishaps be sure to disconnect the power to the brake from its source before attempting to service or repair.
- 2. Look down or secure any load hold by this brake prior to service or repair
- 3. If this brake has been supplied with a manual hand release, do not override the brake by securing the hand release in an open position
- 4. Do not operate brake in atmospheres with explosive gases and dusts or corrosive substances. This brake can operate in non explosive dust or with optional seal in water splash and Almaden Atmospheres.
- 5. When storing or installing the friction rotor, ensure that oil or grease is kept from the friction material surface.

Air gap Hand Release Value

Brake size	DAT 50X	DAT 75X	DAT 100X	DAT 125X	DAT 150X
Nominal air gap mm	0.50	0.50	0.50	0.6	0.3
Maximum air gap mm	1.20	1.20	1.20	1.2	1.00



WIRING DIAGRAM

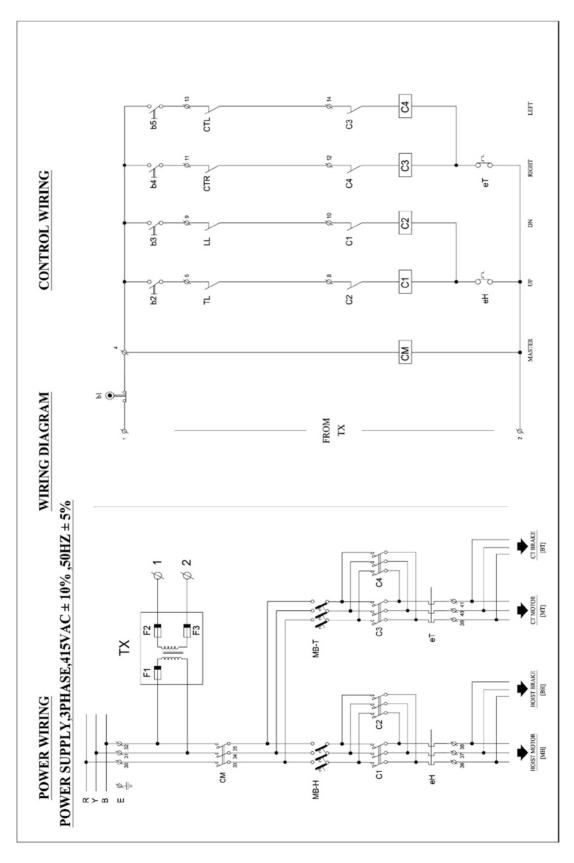



ELECTRICAL SPARE PARTS FOR WRH N,NHL+ET 2T/3T

ITEM CODE	DESCRIPTION			
XCPP126000A	Enclosure for Baseplate XCPP126001A Size 560X260X150 mm			
XCPP126001A	Baseplate for Enclosure XCPP126000A Size 490X220X2 mm			
XCTP0001AVA	Avetronics/Prince Make Control Transformer Primary 415VAC ±5%, ±10% & Secondary 24VAC,50VA			
XMCP0050MDA	Schneider Make MCB 3P 16A Cat No A9N3P16D - Hoist Motor			
XMCP0120MDA	Schneider Make MCB 3P 4A Cat No A9N3P04D - ET Motor	1		
XACP0521TMA	Schneider Make Contactor 12A/24VAC Cat No LC1D12 B7 - Master & Hoist Motor	3		
XACP0620SMA	Schneider Make Contactor 9A/24VAC Cat No LC1D09 B7 - ET Motor			
XORE0130SMA	Schneider Make Overload Relay 4-6A Cat No LRD10 - Hoist Motor			
XORP0350TMA	Schneider Make Overload Relay 1-1.6A Cat No LRD06 - ET Motor	1		
XLSP0070SLZ	Indef Make Limit Switch in Standard Housing, Angular Roller Lever 1NO+1NC, Normal Action, Rating 10A/500V Cat No. SL609N			
XLSP0090SLZ	Indef Make Limit Switch in Oil Tight Housing, Normal Roller Lever 1NO+1NC, Normal Action, Rating 10A/500V Cat No.SL603N			
XPBP0003HHL	Indef Make 5 Way Pendant (Emergency Stop, Hoist/Low Single Speed, Right/Left Single Speed)	1		



ELECTRICAL SPARE PARTS FOR WRH N,NHL FIXED OR WITH G.T./P.T

ITEM CODE	DESCRIPTION		
XCPP125000A	Enclosure for Baseplate XCPP125001A Size 440X260X150 mm		
XCPP125001A	Baseplate for Enclosure XCPP125000A Size 370X220X2 mm		
XCTP0001AVA	Avetronics/Prince Make Control Transformer Primary 415VAC ± 5%, ± 10% & Secondary 24VAC,50VA		
XMCP0050MDA	Schneider Make MCB 3P 16A Cat No A9N3P16D - Hoist Motor		
XACP0521TMA	Schneider Make Contactor 12A/24VAC Cat No LC1D12 B7 - Master & Hoist Motor	3	
XORE0130SMA	Schneider Make Overload Relay 4-6A Cat No LRD10 - Hoist Motor		
XLSP0070SLZ	Indef Make Limit Switch in Standard Housing, Angular Roller Lever 1NO+1NC, Normal Action, Rating 10A/500V Cat No. SL609N	2	
XPBP0001HHL	Indef Make 3 Way Pendant (Emergency Stop,Hoist/Low Single Speed)	1	



MAINTENANCE AND HANDLING

Lubrication

Wire Rope:

- ▶ For proper performance the Wire Rope must be maintained in a clean and well lubricated condition.
- ▶ The rope should be lubricated every 3 months (more frequently for heavier usage or severe conditions).
- ▶ To lubricate the rope, first remove any dirt, grime, moisture or other accumulations of contaminates. Then coat the Wire Rope with ENKLO 68 (M1-18-J-754) oil or equivalent. Ensure that the lubricant is applied to the entire surface of the rope over its entire length.
- ▶ For dusty environments, dry lubricants are suggested.
- ► For conditions not permitting lubricant to fall off the wire rope, consider using nondripping motorcycle drive chain lubricant.

Wire Rope Drum, Hook Block and Sheaves:

- ▶ The drum, hook block and sheaves should be lubricated every 3 months (more frequently for heavier usage or severe conditions).
- ▶ Lubricate the Drum, Hook Block and Sheaves with ENKLO 68 (M1-18-J-754) or MP GREASE 3 (SI-18-M-211) grease.
- ▶ For dusty environments, dry lubricants are suggested.
- ► For conditions not permitting lubricant to fall off the drum, hook block and sheaves, consider using non-dripping motorcycle drive chain lubricant.

Trolley Wheels and Gears:

- ▶ The Trolley Wheels and Gears should be lubricated every 3 months (more frequently for heavier usage or severe conditions).
- ▶ Lubricate the Trolley Wheels and Gears with MP GREASE 3 (SI-18-M-211) grease.
- ▶ For dusty environments, dry lubricants are suggested.
- ► For conditions not permitting lubricant to fall off the trolley wheels and gears, consider using non- dripping motorcycle drive chain lubricant.

Hoist and Trolley Gearboxes – The hoist and trolley gearboxes are lubricated for life and should not need any lubricant replacement.

© 2024 Indef Manufacturing Ltd. All rights reserved.











Office No. 501-504, Shelton Cubix, Plot No. 87, Sector-15, CBD-Belapur, Navi Mumbai - 400 614, India.









